


## 10.1 分解圖、零件表


## PARTS LIST

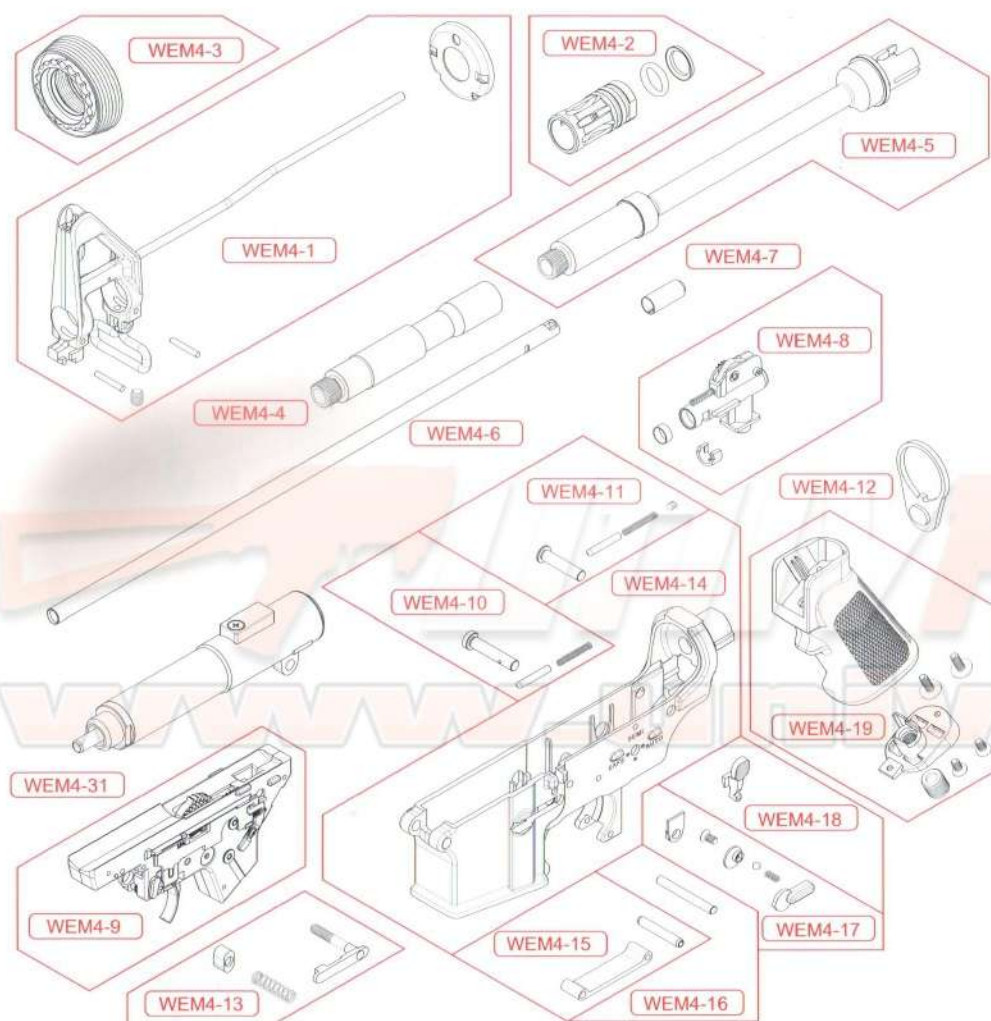

| NO.    | 品名 Parts name         | NO.     | 品名 Parts name             |
|--------|-----------------------|---------|---------------------------|
| WEM4-1 | 準星組 Front Sight Set   | WEM4-9  | 齒輪箱組 Gear Box Set         |
| WEM4-2 | 防火帽組 Flash Hider Set  | WEM4-10 | 前插梢組 Front Pivot Pin Set  |
| WEM4-3 | 固定環組 Fixing Ring Set  | WEM4-11 | 後插梢組 Rear Pivot Pin Set   |
| WEM4-4 | 槍管前段 Front Barrel     | WEM4-12 | 槍托連接蓋板 Receiver End Plate |
| WEM4-5 | 槍管後段組 Rear Barrel Set | WEM4-13 | 彈匣卡榫組 Magazine Catch Set  |
| WEM4-6 | 內槍管 Inner Barrel      | WEM4-14 | 下槍身 Lower Receiver        |
| WEM4-7 | 上旋系統橡皮 Hop-Up Rubber  | WEM4-15 | 扳機護弓組 Trigger Guard Set   |
| WEM4-8 | 上旋系統組 Hop-Up Set      | WEM4-16 | 扳機插梢 Trigger Lock Pin     |

## 10.2 分解圖、零件表

## PARTS LIST

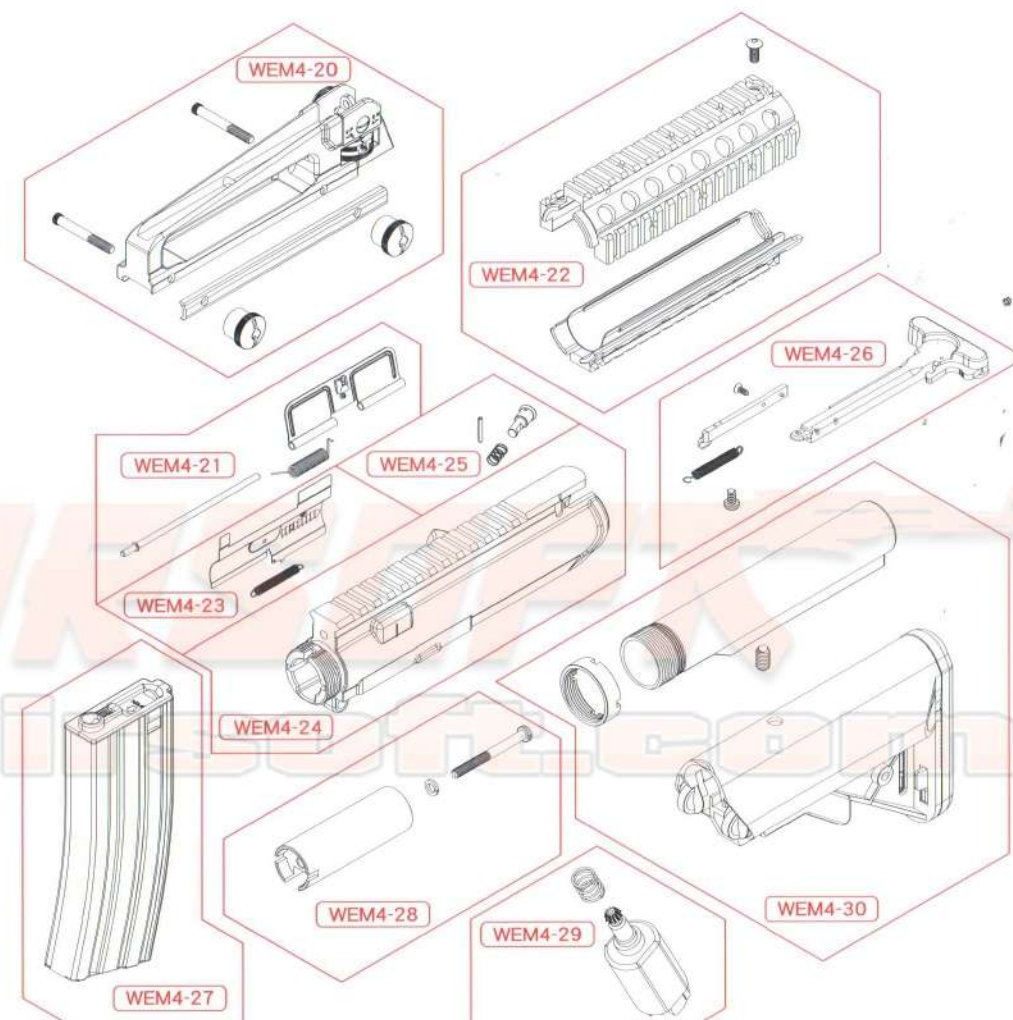


| NO.     | 品名 Parts name                | NO.     | 品名 Parts name                  |
|---------|------------------------------|---------|--------------------------------|
| WEM4-17 | 射擊選擇鈕組 Selector Lever Set    | WEM4-25 | 槍機助進器組 Forward Assist Knob Set |
| WEM4-18 | 槍機卡榫 Bolt Catch              | WEM4-26 | 槍機拉柄組 Charging Handle Set      |
| WEM4-19 | 握把組 Pistol Grip Set          | WEM4-27 | 300發彈匣 300rd Magazine          |
| WEM4-20 | 提把組 Carrying Handle          | WEM4-28 | 伸縮托桿組 Stock Tube Set           |
| WEM4-21 | 防塵蓋組 Ejection Port Cover Set | WEM4-29 | 馬達組 Motor Set                  |
| WEM4-22 | RIS軌道護木組 RIS Handguards Set  | WEM4-30 | 海軍伸縮托組 Crane stock Set         |
| WEM4-23 | 槍機飾片組 Dummy Bolt Set         | WEM4-31 | 汽缸組 Cylinder Set               |
| WEM4-24 | 上槍身組 Upper Receiver Set      |         |                                |



## 10.3 分解圖、零件表

## PARTS LIST

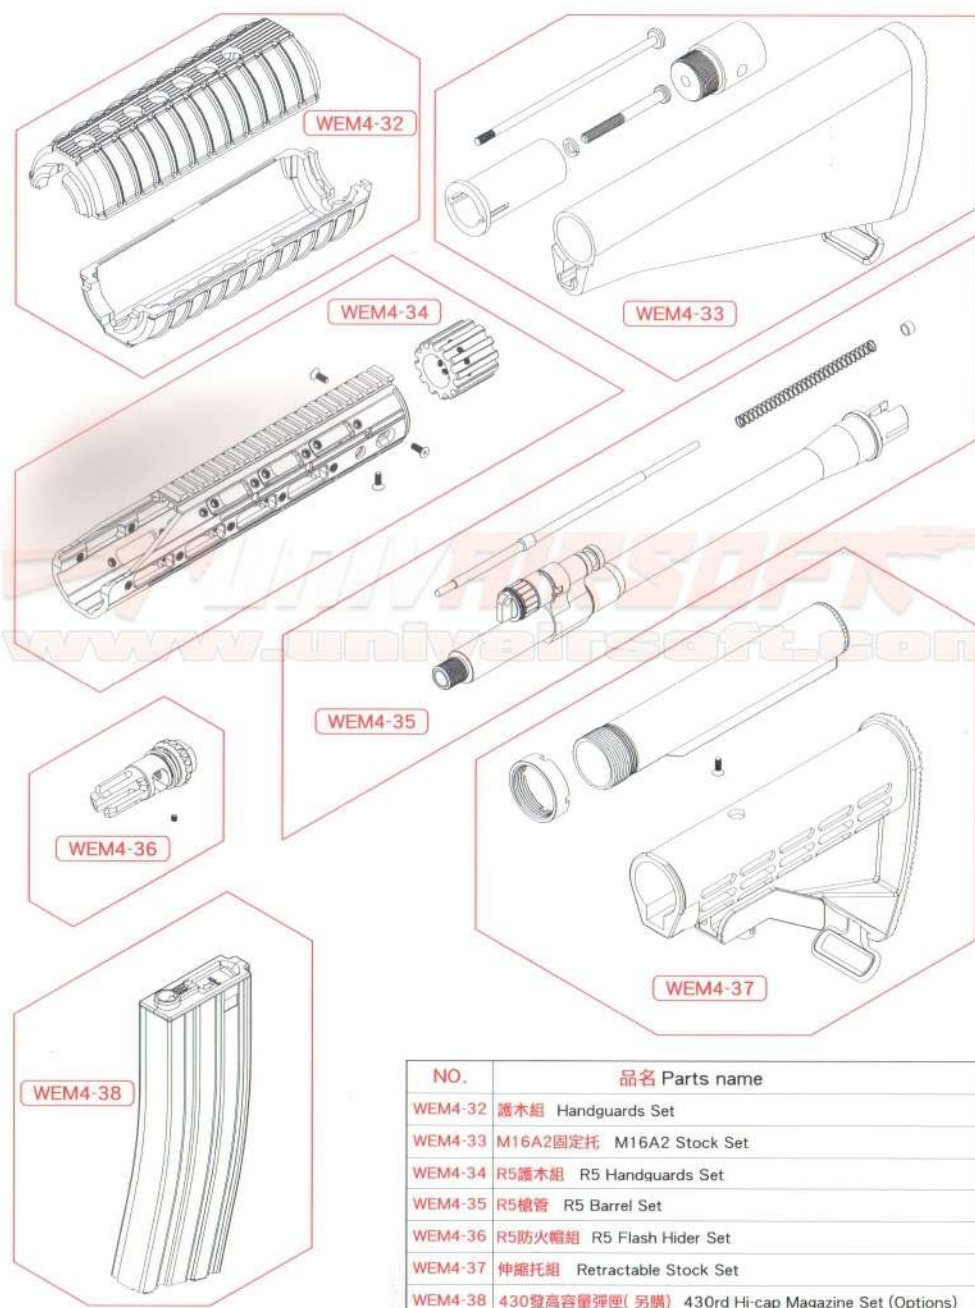

| NO.     | 品名 Parts name                                     |
|---------|---------------------------------------------------|
| WEM4-32 | 護木組 Handguards Set                                |
| WEM4-33 | M16A2固定托 M16A2 Stock Set                          |
| WEM4-34 | R5護木組 R5 Handguards Set                           |
| WEM4-35 | R5槍管 R5 Barrel Set                                |
| WEM4-36 | R5防火帽組 R5 Flash Hider Set                         |
| WEM4-37 | 伸縮托組 Retractable Stock Set                        |
| WEM4-38 | 430發高容量彈匣(另購) 430rd Hi-cap Magazine Set (Options) |

## 11. 故障診斷

## TROUBLE CLINIC

| 狀況<br>SYMPTOM                                                                                   | 原因<br>CAUSE                                                           | 處理方式<br>ACTION                                                                                |
|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| 無法作動<br>No operation at all                                                                     | 選擇鈕設定在SAFE的位置<br>Selector lever set to SAFE.                          | 將選擇鈕切換到半自動或全自動<br>Set the selector to AUTO or SEMI.                                           |
|                                                                                                 | 電池沒電<br>Battery is dead.                                              | 電池充電<br>Charge the battery.                                                                   |
|                                                                                                 | 電池接頭脫離<br>Battery connector is disconnect.                            | 接頭確實接牢<br>Connect the connector.                                                              |
|                                                                                                 | 馬達標準壽命已到(約5萬發)<br>Expired the motor life.<br>(about 5 million rounds) | 更換馬達<br>Replace the motor.                                                                    |
|                                                                                                 | 保險絲燒毀<br>Fuse is blown out.                                           | 更換保險絲<br>Replace the fuse.                                                                    |
| 馬達有動作卻不能擊發<br>Motor is revolving but gun doesn't work                                           | 齒輪或內部零件損壞<br>Gear or internal components of damage.                   | 請至專賣店維修<br>Purchase the replacement parts from the dealer.                                    |
|                                                                                                 | 彈匣卡彈<br>Bullets are clogged in the magazine.                          | 請輕拍彈匣並使用高品質BB彈<br>Shake the magazine and use high quality BB bullets.                         |
|                                                                                                 | 槍膛卡彈<br>Bullets are clogged in the chamber.                           | 使用通槍條通出BB彈<br>Using the cleaning rod to remove the bullet.                                    |
| 單發不正確<br>Malfunction of semi auto                                                               | 齒輪正時未對準<br>Deviation in gear timing.                                  | 切換至連發射擊2~3秒後再切回單發<br>Firing 2~3 sec in the full auto mode and then return to the semi auto.   |
|                                                                                                 | 單連發撥桿損壞<br>Cut off lever damage.                                      | 請至專賣店維修<br>Purchase the replacement parts from the dealer.                                    |
| 連發不正確<br>Malfunction of full auto                                                               | 齒輪正時未對準<br>Deviation in gear timing.                                  | 切換至單發射擊2~3發後再切回連發<br>Firing 2~3 shots in the semi auto mode and then return to the full auto. |
|                                                                                                 | 單連發撥桿損壞<br>Cut off lever damage.                                      | 請至專賣店維修<br>Purchase the replacement parts from the dealer.                                    |
| 連發速度變慢<br>Firing circle slow                                                                    | 電池即將沒電<br>Deviation in gear timing.                                   | 電池充電<br>Charge the battery.                                                                   |
| BB彈飛行距離變短或未擊發時由槍口掉落<br>Shooting distance becomes shorter or not fired when falls by the muzzle. | 上旋系統未調整<br>Hop-Up system unadjusted.                                  | 調整上旋系統<br>Adjusted the hop-up.                                                                |
|                                                                                                 | BB彈不良<br>Faulty BB bullets.                                           | 請使用高品質BB彈(勿使用回收彈)<br>Please use high quality BB bullets. (Do not use the recycling bullets)   |
|                                                                                                 | 活塞O環磨損<br>The piston o-ring worn off.                                 | 請至專賣店維修<br>Purchase the replacement parts from the dealer.                                    |
| 作動聲音異常<br>Overly loud operating noise                                                           | 齒輪或內部零件損壞<br>Gear or internal components of damage.                   | 請至專賣店維修<br>Purchase the replacement parts from the dealer.                                    |